

. ا

3

Replacing the image drums

There are four color image drums: yellow, magenta, cyan, and black. Use this procedure to install the drums. This example shows the yellow drum being replaced.

- 1 Replace the image drum when REPLACE <COLOR> DRUM appears on the control-panel display.
- 2 Open the front doors of the MFP and swing the large green lever down.

Note

Before beginning this procedure, you might want to remove your jewelry, which can snag on parts inside the MFP.

- 3 Rotate the blue dial up until it clicks, and the image-drum door unlatches.
- 4 Open the door completely.
- 5 Pull the used drum partially out of the MFP. Grasp the blue handle on top of the drum, and then remove the drum.

Note

If toner gets on your clothes or your hands, wash them with cold water.

