

### REQUIRED FOR A SUCCESSFUL REFILL:

Toner, 1 funnel cap

1 hole plug, Cutting pliers, Glue

### General Refilling Procedures:

Make sure you hold this cartridge in an upright position when opening the refill hole (some remaining or excess toner can and may fall out of the cartridge). Slide the small cover door, shown in picture B, to the left gently. Please be careful not to slide this small door off the track (it can be quite difficult to replace).

Before opening the bottle of toner, turn it upside down and tap it on a table to loosen the toner and allow it to flow freely. Remove the cap and pull the seal off the bottle.

Attach the funnel cap making to sure it is on tightly. Tilt the cartridge at a 45 degree angle and then the funnel cap toward the filling hole and insert it into the hole. If the toner stops flowing before the cartridge is full, simply remove the toner, close the cap, turn the bottle upside down and tap it on a table. If the funnel cap you are provided is much larger than the opening of the refill hole, you can use plain paper or news paper as an alternative assistant to help guide the toner directly into the hole.

When you are done refilling this cartridge, slide the small door back to its original position, so that the hole is no longer exposed.

You can now place your cartridge back into your printer as shown in picture A.

**NOTE:** If picture A looks different than your printer, please set colors according to your printer.

A.



B.




Gently slide cover  
open

C.



### How to replace the chip

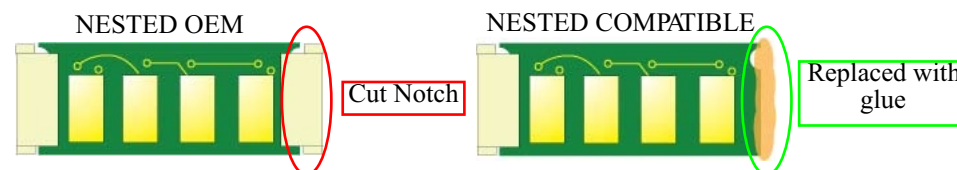

**IMPORTANT: DO NOT GET GLUE NEAR OR ON THE CONTACTS**

With some pliers, clip off the tab closest to the edge of the cartridge.

Remove the OEM chip from the cartridge and ensure the tab surface is smooth and level. Slide the replacement chip into place (The chip should slide comfortably under the notch that was not removed). With a hot glue gun, or crazy glue, hold the chip and glue the end of it as shown in the illustration above (Nested Compatible). Do not get any glue near or on the contacts of the chip as it can cause damage to the chip.

Very small amounts of glue will do, and will also be make removing the chip easy on your next refill.

**Οδηγίες ασφαλείας για την χρήση Τόνερ** Το τόνερ μπορεί να είναι τοξικό. Το τόνερ πρέπει να το κρατάμε μακριά από παιδιά κάθε ηλικίας. Η εισπνοή του τόνερ πρέπει να αποφεύγεται σε κάθε περίπτωση. Να γεμίζεται το τόνερ όχι σε κατοικίες αλλά σε εξωτερικό χώρο. Να εργάζεστε με προφυλάξεις και συγκεντρωμένα και μην εισπνέετε την σκόνη. Για μεγαλύτερη ασφάλεια συνιστούμε να έχετε παράλληλα μια ηλεκτρική σκούπα να δουλεύει κοντά στο σημείο που γίνεται η χρήση ώστε να απορροφά τα αερόβια σωματίδια. Για την προφύλαξή σας να χρησιμοποιείτε προστατευτικά γάντια. Αν υπάρχει να χρησιμοποιείτε προστατευτική μάσκα εισπνοής. Σας συμβουλευόμαστε να ακολουθείτε τις παραπάνω προστατευτικές οδηγίες.

**ΠΡΟΣΟΧΗ:** Δεν αναλαμβάνουμε καμία ευθύνη ότι η κασέτα σας θα δουλέψει. Η επιτυχία της επαναγέμισης εξαρτάται αποκλειστικά από την ποιότητα του δοχείου του εκτυπωτή, του προσεκτικού καθαρίσματος και ξαναγεμίσματος του. Για να έχετε καθαρές εκτυπώσεις χωρίς προβλήματα σας συμβουλευόμαστε να καθαρίσετε την κασέτα από το παλιό τόνερ που έχει μείνει. Για μέγιστη ποιότητα είναι σημαντικό να μην αναμιχθούν τόνερ διαφορετικών κατασκευαστών.